

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://toyooki.nt-rt.ru> || tik@nt-rt.ru

MANUALLY OPERATED DIRECTIONAL CONTROL VALVE (HD3)

MANUALLY OPERATED DIRECTIONAL CONTROL VALVE (HD3) (SLIDE SPOOL TYPE) SIZE 025



Features


This type of valve switches the direction of flow of hydraulic fluid in response to operation of the manual lever.

A manual valve switches the direction of flow of hydraulic fluid flow instead of the solenoid used in the solenoid valve.

- Three types of valve (spring center type, spring offset type, and detent type) are available as standard.
- If valves other than those indicated below are required, please consult us.
- If subplate SHD025-**T*(A) is necessary, please order one separately.
- Finish the mounting faces to the same quality as the valve faces (3.2 μ mRz).

Description of the model designation

HD3-43LG (D) -BCA-025A

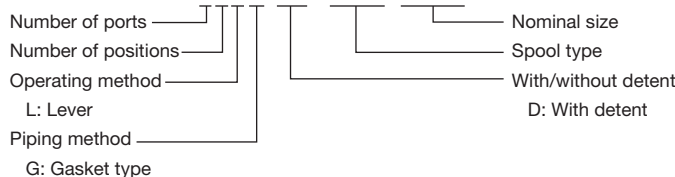

Cautions on use Please read the Operating Manual carefully to ensure correct usage.

Specifications

Nominal Size	Rated Flow (L/min)	Max. Operating Pressure (MPa)	Permissible Back Pressure (MPa)	Model
025	27	25	7	HD3-43LG (D) -***-025A

For , refer to table below.

Spring Center Type		Spring Offset Type	No Spring Type (with Detent)		
	43LG-BCA			43LGD-BCA	
	43LG-BDA			43LGD-BDA	
	43LG-BGA			43LGD-BGA	

Outside dimensions

SOLENOID VALVES / DIRECTIONAL CONTROL VALVES