

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://toyooki.nt-rt.ru> || tik@nt-rt.ru

VARIABLE THROTTLE VALVE

VARIABLE THROTTLE VALVE (HF)




This valve controls flow by changing the cross-sectional area through which fluid flows. If the pressure difference between the IN and OUT ports varies, the flow that passes through the throttle varies.

The valve is appropriate in applications where the pressure difference between the IN and OUT ports is small and slight variations in flow are permissible.

- When the valve is provided with a check valve, the check valve cracking pressure is 0.04 MPa.

■ Description of the model designation

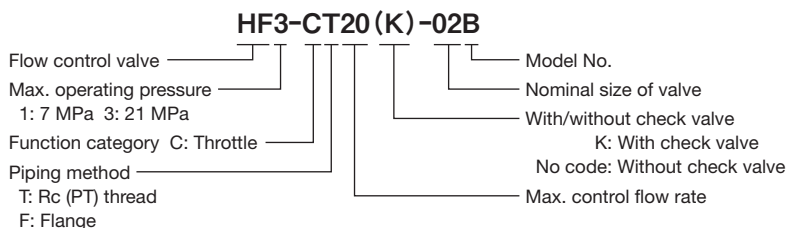

Without check valve


Variable throttle valve



Nominal Size	Rated flow rate (L/min)	Model		
		Thread-connection type		Flange-connection type
02	20	HF3-CT20-02B	—	—
03	30	HF3-CT30-03B	HF1-CT30-03	—
04	50	—	—	HF3-CF50-04A
06	75	—	HF1-CT75-06	HF3-CF75-06A
Max. operating pressure (MPa)		21	7	21

With check valve

Variable throttle valve with check valve



Nominal size	Rated flow rate (L/min)	Model			Free flow (L/min)
		Thread-connection type		Flange-connection type	
02	20	HF3-CT20K-02B	—	—	20
03	30	HF3-CT30K-03B	HF1-CT30K-03	—	30
04	50	—	—	HF3-CF50K-04A	50
06	75	—	HF1-CT75K-06	HF3-CF75K-06A	75
Max. operating pressure (MPa)		21	7	21	


Dimension table

Unit: mm

Nominal size	A	B	C	D	E	F	G	H	J	K	L	Mass (kg)
02	46	62	28.5	25	10	83	25	10.5	¼	34.6	30	0.5
03	57	78	35.5	32	10	95	32	13	⅜	41.6	36	0.9

Outside dimensions

HF1-CT**(K)-**

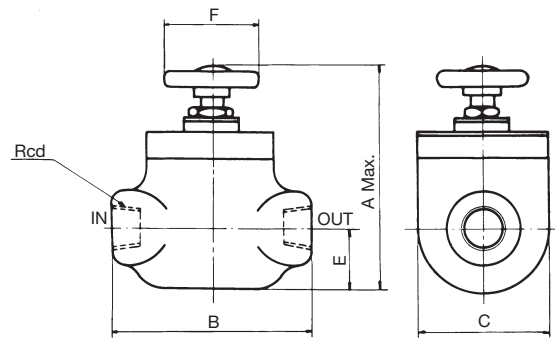


Dimension table

Unit: mm

Model	A	B	C	E	F	d	Mass (kg)
HF1-CT30 (K) -03	110.5	83	58	29	55	$\frac{3}{8}$	1.2
HF1-CT75 (K) -06	140.5	114	71	37	55	$\frac{3}{4}$	2.5

HF3-CF**(K)-**

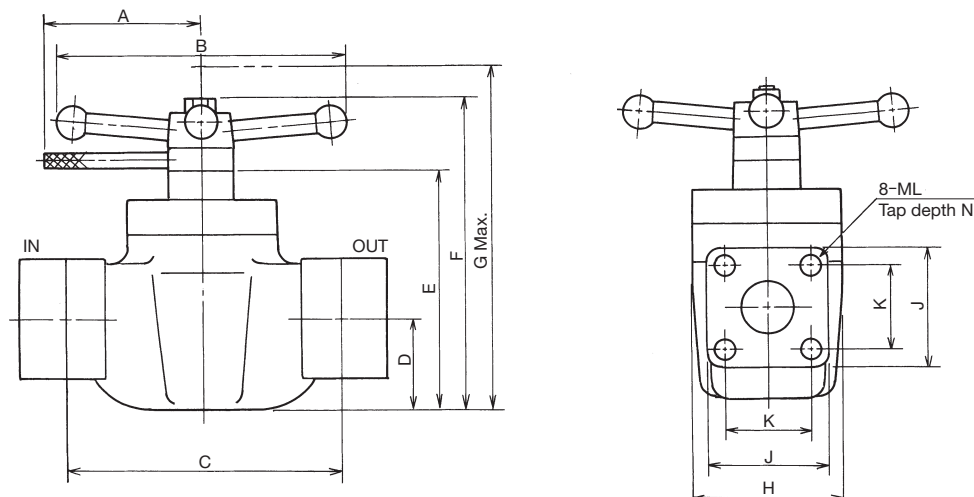

Dimension table

Unit: mm

Model	A	B	C	D	E	F	G	H	J	K	L	N	Used flange	Mass (kg)
HF3-CF50 (K) -04A	70	135	140	46	111	145	167	76	58	36	10	17	JIS B 2291 SSA-15	5.5
HF3-CF75 (K) -06A	70	135	140	46	111	145	167	76	58	40	10	17	JIS B 2291 SSA-20	5.5

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://toyooki.nt-rt.ru> || tik@nt-rt.ru