

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://toyooki.nt-rt.ru> || tik@nt-rt.ru



BALANCING VALVE (HGR)

BALANCING VALVE (HGR)



Internal drain type

External drain type

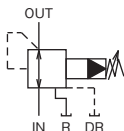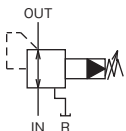


A balancing valve is a new type of compound pressure control valve that supplies the required balancing pressure to allow smooth vertical movements of a high load spindle head. The valve can control circuits with its compound functions: the pressure-reducing valve function and the relief valve function. It also enables control of the required balance pressure using one handle.

Features

- Using this type of valve, the hydraulic system can be designed compactly and installation space can be reduced.
 - The pressure can be adjusted easily with a single handle operation.
 - The valve is compact and light.
- Two drain types (internal drain type and external drain type) are available.
 - If subplate SHGR**-*T3 is necessary, please order one separately.

Description of the model designation

HGR2-BG2(D)-03

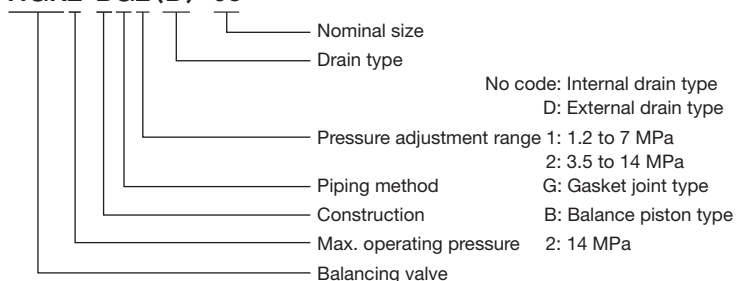

Specifications


Nominal size	Rated flow rate (L/min)	Maximum flow rate (L/min)	Max. operating pressure (MPa)	Pressure adjustment range (MPa)	Model	
					Internal drain type	External drain type
03	40	80	14	1.2 to 7	HGR2-BG1-03	HGR2-BG1D-03
				3.5 to 14	HGR2-BG2-03	HGR2-BG2D-03
06	120	190	14	1.2 to 7	HGR2-BG1-06	HGR2-BG1D-06
				3.5 to 14	HGR2-BG2-06	HGR2-BG2D-06

B


PRESSURE CONTROL VALVES

Outside dimensions


HGR2-BG*(D)-03

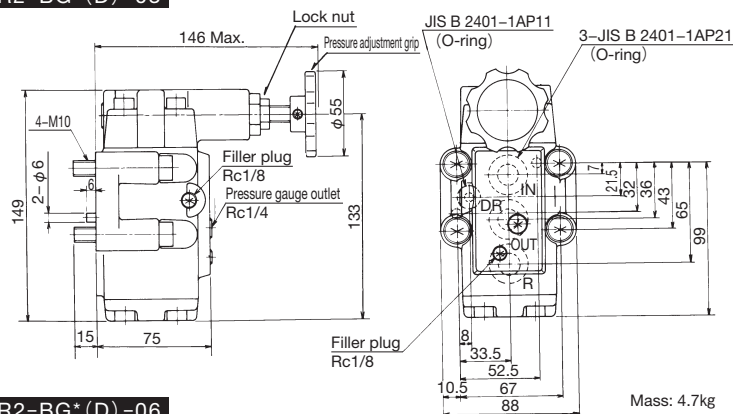

SHGR**-*T3

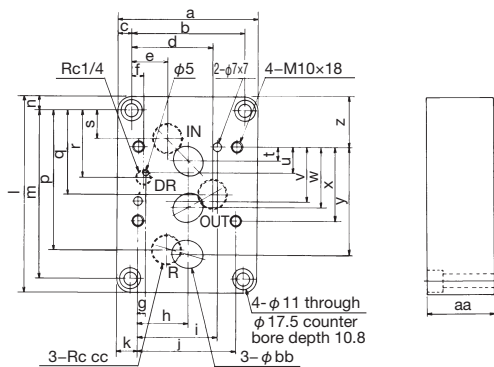

HGR2-BG*(D)-06

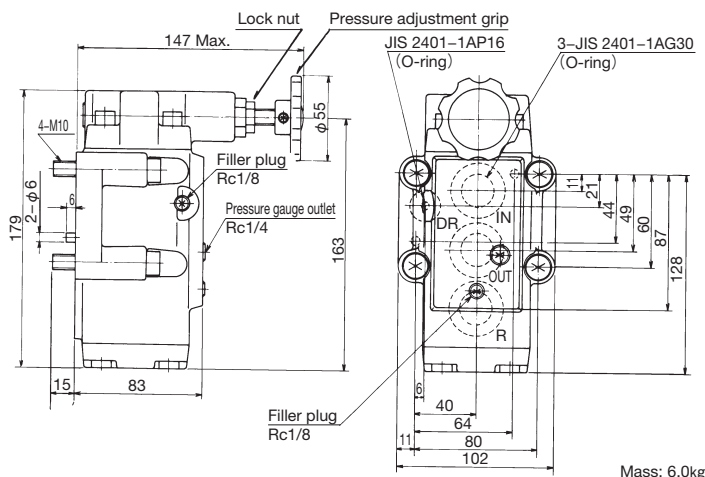

Unit: mm

Model	a	b	c	d	e	f	g	h	i	j	k	l	m	n
SHGR03-03T3	100	78	11	56	35	10	8	33.5	52.5	67	16.5	110	88	11
SHGR03-04T3	100	78	11	56	28	10	8	33.5	52.5	67	16.5	118	96	11
SHGR06-06T3	114	92	11	66	29	10	6	40	64	80	17	158	136	11
SHGR06-08T3	114	92	11	66	26	10	6	40	64	80	17	174	152	11

Model	p	q	r	s	t	u	v	w	x	y	z	aa	bb	cc
SHGR03-03T3	76.5	51.5	40	26.5	7	21.5	32	36	43	65	26.5	40	14	3/8
SHGR03-04T3	79	48	48	17	7	21.5	32	36	43	65	34.5	45	14	1/2
SHGR06-06T3	113	68	54.5	23	11	21	44	49	60	87	40.5	55	22	3/4
SHGR06-08T3	126	76	62.5	26	11	21	44	49	60	87	48.5	60	22	1

B-25

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47